
# **CS7010** – Use and Maintenance

ATTENTION! Do not use the machine before you have read and understood the User Manual




**1.** Check the Diesel fuel tank level/ LPG bottle charge/Battery charge. In case re-fill/change the LPG Bottle/charge the batteries

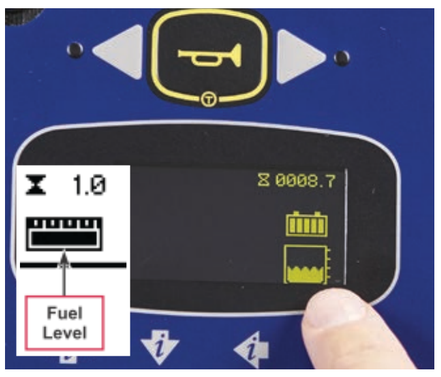


**2.** Check the fresh water level. In case, fill the tank with clean water. The clean water temperature must not exceed 40 °C



**3.** Fill the EcoFlex™ tank (placed under the seat) with a detergent suitable for the work to be performed (highly concentrated detergent)



**4.** Install the squeegee and fasten it to its assembly then connect the vacuum hose to the squeegee. Make proper height and inclination adjustments



**5.** Install brushes/main and side brooms



**6.** Fill in the DustGuard™ water tank (if equipped)



**7.** Turn the ignition key to “I”



**8.** Press OneTouch™ scrub (adjusting the pressure if needed) and One-Touch™ sweep buttons according to your application



**9.** Adjust to the desired water flow



**10.** Adjust to the desired chemical concentration (shown in the display)



**11.** Press the forward pedal and start operating the machine



**12.** Press the Ecoflex™ switch whenever you temporarily need a greater cleaning power




**13.** Empty the recovery tank with the hose. Then empty the solution tank with the transparent hose



**14.** Wash with clean water the recovery tank and the vacuum grid. Remove and clean the debris tray.



**15.** Close the solution tank valve and remove and clean the filter. Ensure sealing gasket remains in filter cap

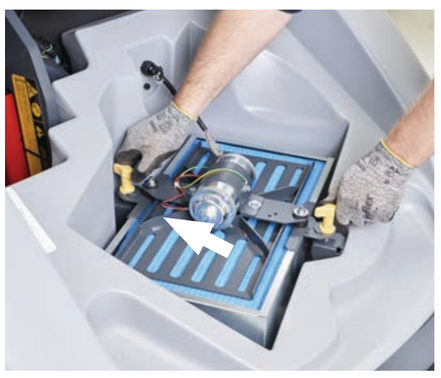

**16.** Dump the hopper, remove and clean the filter



**17.** Remove and clean brushes and brooms



**18.** Take the squeegee off, check the blades wear status



**19.** Remove the side skirts and check the blade status




**20.** Clean the machine using a damp cloth and park it with the recovery tank open

If the machine has been used until the battery level indicator shows no charge, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.
PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

**Nilfisk**
Bowerbank Way • Gilwilly Industrial Estate • Penrith • Cumbria • CA11 9BQ
Tel: 01768 868995 • sales.uk@nilfisk.com


**www.nilfisk.co.uk**

NILFISK


# CS7010 – Troubleshooting

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

## The machine doesn’t work as it should?

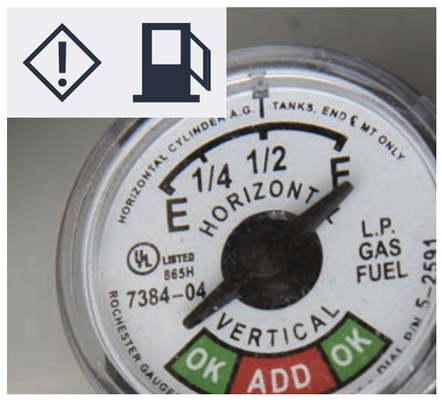


**1.** Check the Diesel fuel tank level/ LPG bottle charge. In case re-fill/ change the LPG Bottle

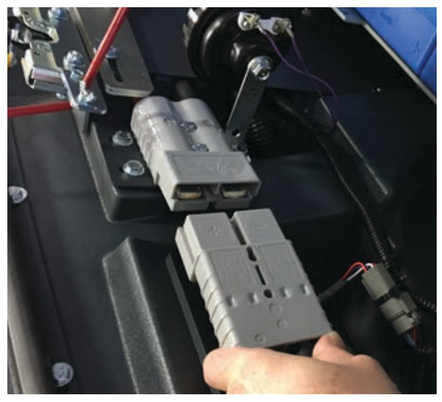

**2.** For the battery version check the battery voltage and if needed recharge



**3.** Drive pedal must be released during engine cranking




**4.** Inspect the circuit breakers

## The solution is not dispensed or poor water recovery?



**1.** Enough water in the solution tank?



**2.** Solution valve open?



**3.** Is the solution filter clean



**4.** Squeegee hose free from debris. Verify recovery tank is not full and float balls are blocking motor inlet

## The machine doesn’t clean as it should?



**1.** Squeegee angle must be verified



**2.** Squeegee height can be adjusted with castor wheels



**3.** Remove and inspect squeegee blades



**4.** Release the lever, open the right side skirt holder and inspect brushes

## The brush don’t work as they should?



**1.** Panel filter inspection required every day



**2.** Inspect the main broom for ropes that may affect rotation



**3.** Inspect side brooms



**4.** Adjust main broom pattern per operators manual to avoid overload condition. Inspect broom and drive for debris or adjust height if overload detected

9326 8/2023

NILFISK